

61 31 676 Replace the operating facility for the front left or right additional seat function (after vehicle diagnosis)

Overview of Activities

Additional Information

Preliminary Work

- 1 Remove the mirror triangle cover
- 2 Remove the cover on the door handle
- 3 Remove front door trim panel

Main Work

- 4 Remove the operating unit for the additional seat function
- 5 Install the operating unit for the additional seat function


Postprocesses

- 6 Install front door trim panel
- 7 Install the mirror triangle cover
- 8 Attach the cover to the door handle

General information

PRELIMINARY WORK

1–Remove the mirror triangle cover

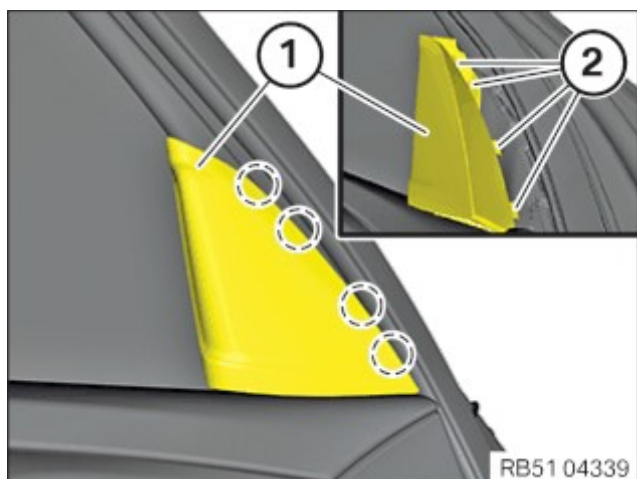

- Unclip the mirror triangle cover (1) with a suitable plastic wedge inward from the latch mechanisms (2) and feed it out to the back.
- If necessary, disconnect the plug connection and remove the mirror triangle cover (1).


2–Remove the cover on the door handle

RISK OF DAMAGE

Scratches.

Tools and sharp-edged components can cause scratches.

- Protect working area.
- Handle tools and components carefully.

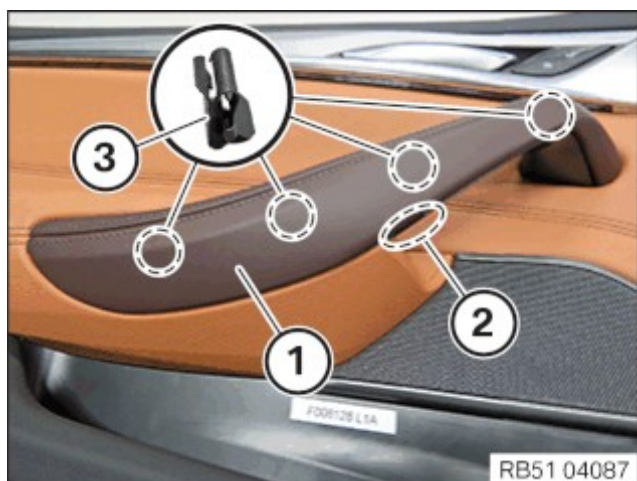

- Lever out and remove the cover (1) with a suitable plastic wedge beginning at the recess (2) inward from the clamps (3).


3-Remove front door trim panel

RISK OF DAMAGE


Scratches.

Tools and sharp-edged components can cause scratches.


- Protect working area.
- Handle tools and components carefully.

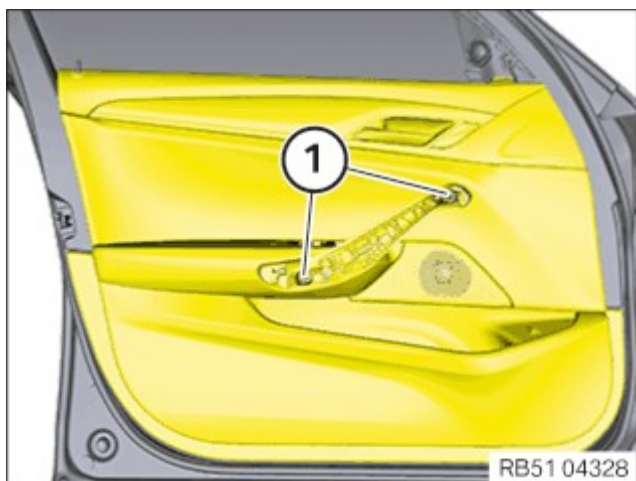

- Loosen screws (1).

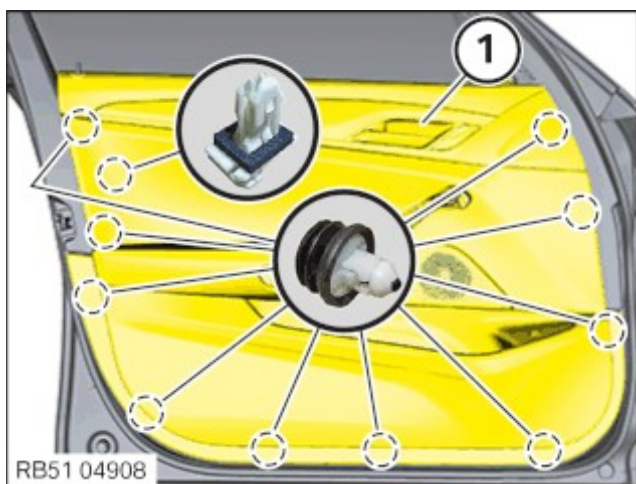


- Detach the door trim panel (1) from the clips with a suitable plastic wedge.
- Lift out the door trim panel (1) from the window cavity seal towards the top.

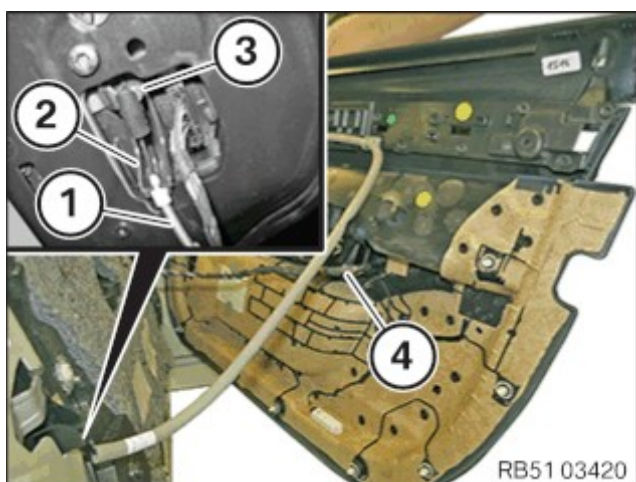

- Detach the Bowden cable (1) for the release lever on the counter support (2).
- Detach the Bowden cable (1) for the release lever on the door lock (3).
- Disconnect all the plug connections and the cable clips of wiring harness (4) and remove the door trim panel.

MAIN WORK


4-Remove the operating unit for the additional seat function

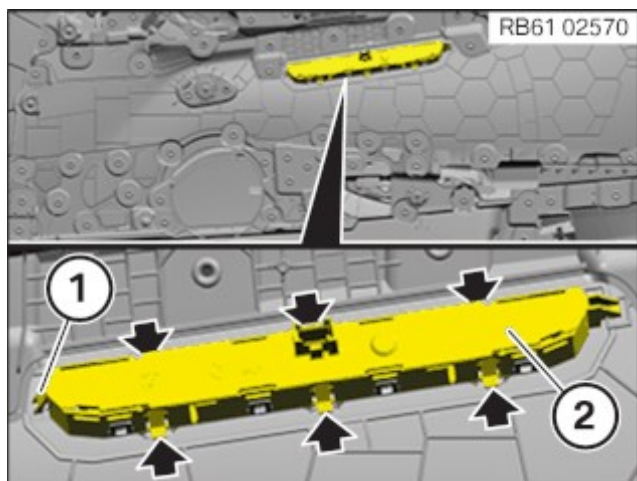


- Loosen latch mechanism (1).
- Unlock clamps (arrows).
- Press out the operating unit with the trim (2) from the door trim panel.

5-Install the operating unit for the additional seat function

► When replacing the operating unit for the additional seat function: Remount the trim

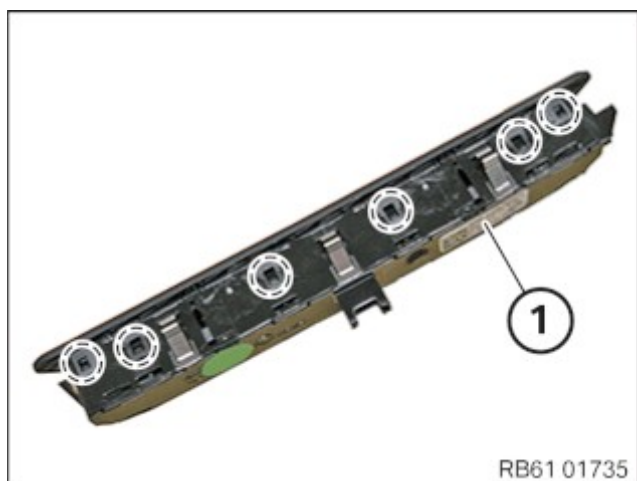


- Release all the latch mechanisms on the operating unit (1).
- Remove the trim of the operating unit (1).

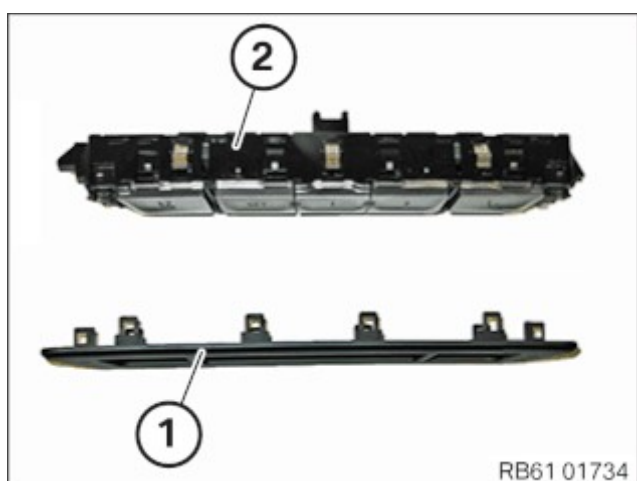


- Clip the trim (2) on to the operating unit (2) .


- Check that the latch mechanism of the operating unit (1) is fitted correctly on both sides.

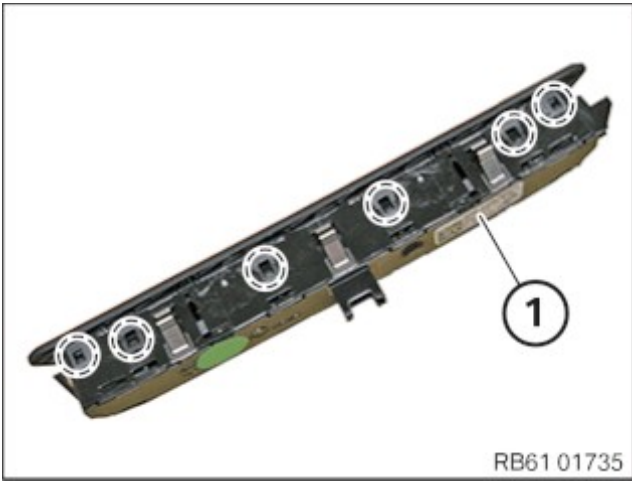

- Press the operating facility and trim (1) into the door trim panel (2).

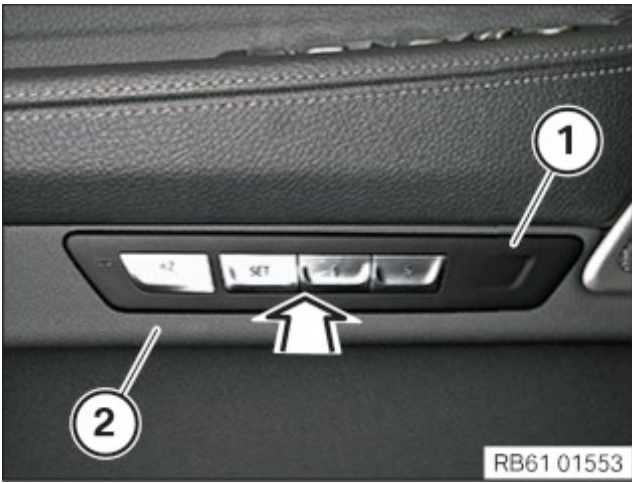


- Check the clamps (arrows) of the operating facility (2) for correct fit.
- Check the latch mechanism (1) is fitted correctly.

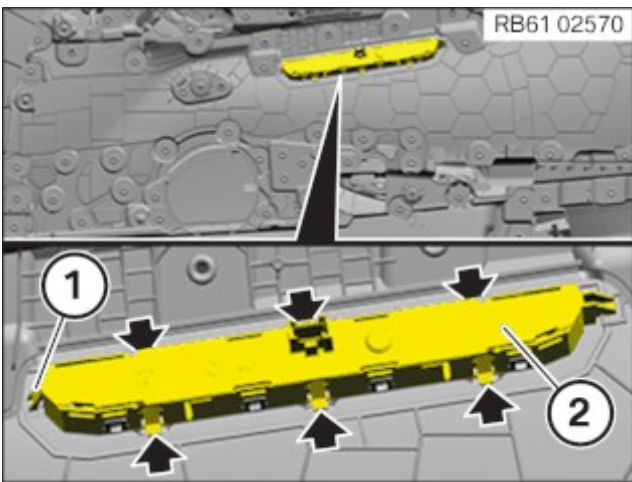

POSTPROCESSES


6-Install front door trim panel

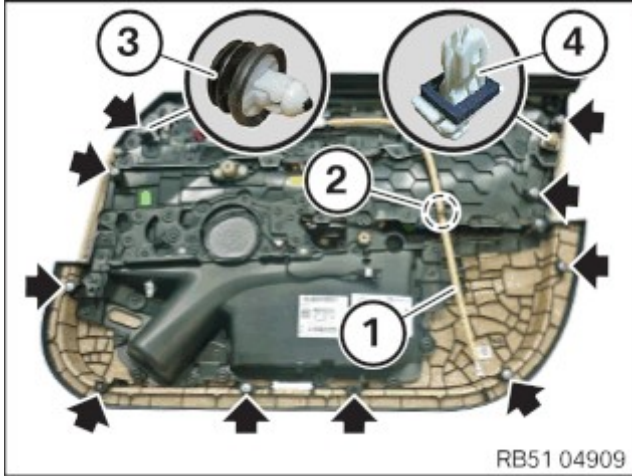


- Attach the Bowden cable (1) in area (2) in the door trim panel.
- Check clips (arrows) (3) for damage and, if necessary, renew them.

The clips (3) must not be engaged. The disengaged state is shown.

- Check the clip (4) for damage and renew if necessary.

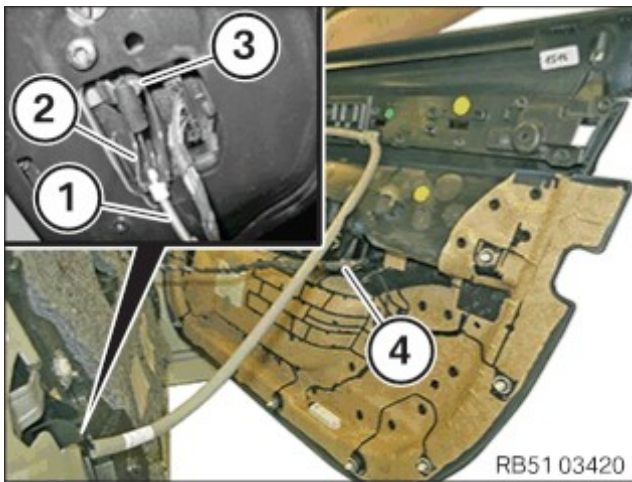

- Attach the Bowden cable (1) for the release lever on the door lock (3).
- Attach the Bowden cable (1) for the release lever on the counter support (2).
- Connect all the connectors and the cable clips of wiring harness (4) to the door trim panel.

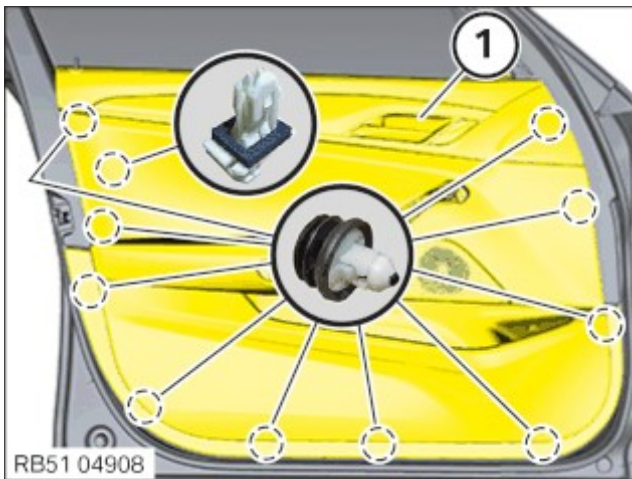


- Attach door trim panel (1) at the top to the window cavity seal.
- Clip the door trim panel (1) into the clips .

- Tighten the screws (1).


Door trim panel



3 Nm

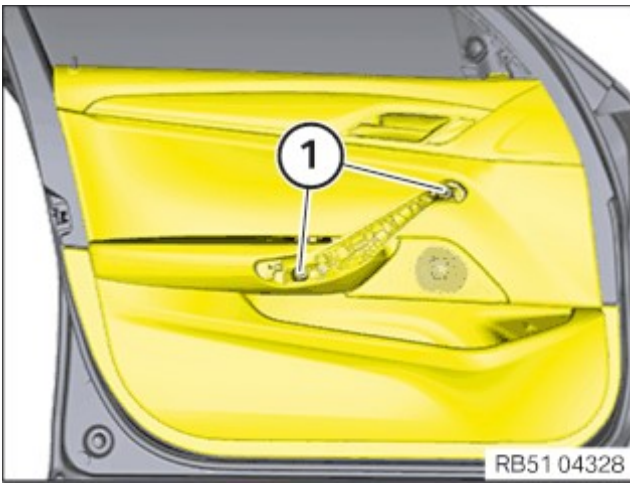


7-Install the mirror triangle cover

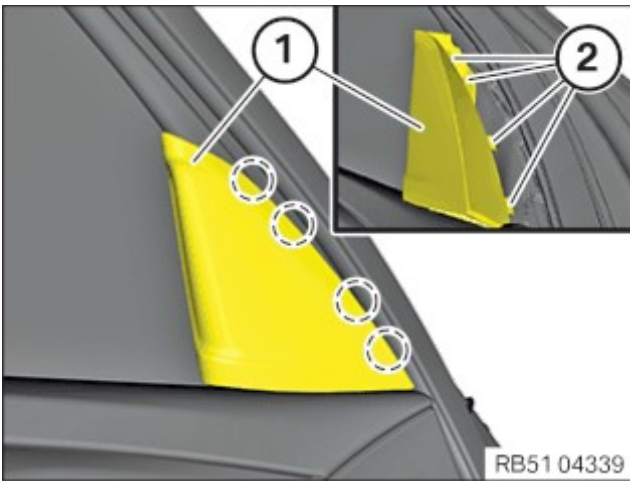

- If necessary, connect the connector to the mirror triangle cover (1).
- Insert the mirror triangle cover (1) and clip it into the latch mechanisms (2).

8-Attach the cover to the door handle

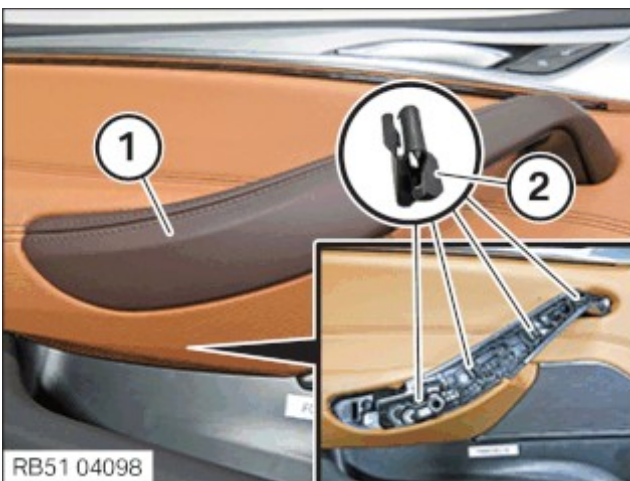

- Renew the clamps (2).

Parts: Clamps

- Align the cover (1) on the door handle and engage it in the clamps (2).