

Layer 1 : normal		LED mode : FN+CAPS or ESC + CAPS FN2 toggle : FN + SPACE (cancel only : ESC + BACK SPACE)							
R \ C	1	2	3	4	5	6	7	8	
1									
2	Q	TAB	A		Z		ESC	1	
3	W	CAP	S		X			2	
4	E		D		C			3	
5	R	T	F	G	V	B	5	4	
6	U	Y	J	H	M	N	6	7	
7	I	]	K		<		=	8	
8	O		L		>	FN(CONTEXT)		9	
9	P	[	;	"		?	-	0	
10	CTRL_L	SHIFT_L	CTRL_R	ALT_L	SHIFT_R	ALT_R	CONTEXT		
11	WIN_L	~	\	SPACE	ENTER	FN	BACKSPACE		
Layer 2 : FN									
R \ C	1	2	3	4	5	6	7	8	
1									
2	Q	~	LEFT		Z		ESC	F1	
3	UP	LED	DOWN		X			F2	
4	E		RIGHT		C			F3	
5	R	T	F	G	V	B	F5	F4	
6	U	Y	J	H	M	N	F6	F7	
7	PRINT SCR	INSERT	HOME		END		F12	F8	
8	SCROLL LOCK		PAGE UP		PAGE DOWN	FN(CONTEXT)		F9	
9	PAUSE	UP	LEFT	RIGHT		DOWN	F11	F10	
10	CTRL_L	SHIFT_L	CTRL_R	ALT_L	SHIFT_R	ALT_R	CONTEXT		
11	WIN_L	~	\	FN2	ENTER	FN	DELETE		
Layer 3 : FN2									
R \ C	1	2	3	4	5	6	7	8	
1									
2	Q	TAB	A		Z		ESC	1	
3	W	CAP	S		X			2	
4	E		D		C			3	
5	R	T	F	G	V	B	5	4	
6	U	Y	J	H	M	N	6	7	
7	I	]	K		<		=	8	
8	O		L		>	DOWN		9	
9	P	[	;	"		?	-	0	
10	CTRL_L	SHIFT_L	RIGHT	ALT_L	UP	LEFT	LEFT		
11	WIN_L	~	\	SPACE	ENTER	FN	BACKSPACE		