



Component list table:

Mount Mecha	A6000	345213401
Mount Mecha	A6005	345213401
Mount Mecha	A6004	410314301
Mount Mecha	A6007	410314301
Mount Mecha	A6008	410314301
Mount Mecha	A6006	410314301

Power and signal connection table:

REG12V	1
REG12V	2
REG12V_GND	3
REG12V_GND	4
REG12V_GND	5
REG12V_GND	6
REG12V_GND	7
REG12V_GND	8
REG12V_GND	9
REG12V_GND	10
REG12V_GND	11
REG12V_GND	12
REG12V_GND	13
REG12V_GND	14
REG12V_GND	15
REG12V_GND	16
REG12V_GND	17
REG12V_GND	18
REG12V_GND	19
REG12V_GND	20
REG12V_GND	21
REG12V_GND	22
REG12V_GND	23
REG12V_GND	24
REG12V_GND	25
REG12V_GND	26
REG12V_GND	27
REG12V_GND	28
REG12V_GND	29
REG12V_GND	30
REG12V_GND	31
REG12V_GND	32
REG12V_GND	33
REG12V_GND	34
REG12V_GND	35
REG12V_GND	36
REG12V_GND	37
REG12V_GND	38
REG12V_GND	39
REG12V_GND	40
REG12V_GND	41
REG12V_GND	42
REG12V_GND	43
REG12V_GND	44
REG12V_GND	45
REG12V_GND	46
REG12V_GND	47
REG12V_GND	48
REG12V_GND	49
REG12V_GND	50

Motor and control signal connection table:

NC	1
BALANCE_ERR	2
REG12V	3
GND	4
RV_ERR	5
BACK_LIGHT	6
DRIVER	7
GND	8
GND	9
GND	10
GND	11
GND	12
GND	13
GND	14
GND	15
GND	16
GND	17
GND	18
GND	19
GND	20
GND	21
GND	22
GND	23
GND	24
GND	25
GND	26
GND	27
GND	28
GND	29
GND	30
GND	31
GND	32
GND	33
GND	34
GND	35
GND	36
GND	37
GND	38
GND	39
GND	40
GND	41
GND	42
GND	43
GND	44
GND	45
GND	46
GND	47
GND	48
GND	49
GND	50